




STYLPRO™ MELODY MIRROR Rechargeable Bluetooth Light Up Vanity Mirror



SCAN ME

Miroir de toilette lumineux rechargeable Bluetooth ■ Espejo de tocador luminoso recargable con Bluetooth
Wiederaufladbarer Bluetooth-Licht-Kosmetikspiegel ■ Oplaadbare Bluetooth verlichte kaptafelspiegel
Ładujące się lustro kosmetyczne z Bluetooth

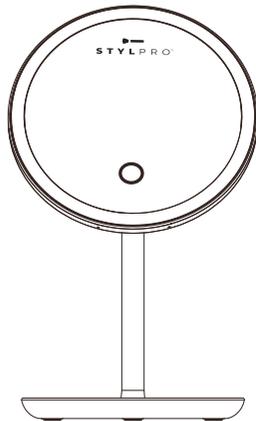

(EN) USE & CARE GUIDE

FOR YOUR SAFETY AND CONTINUED ENJOYMENT OF THIS PRODUCT, ALWAYS READ INSTRUCTION LEAFLET CAREFULLY BEFORE USING.

The product is intended for private use only and is not intended for commercial use or for use in other applications.

SPECIFICATIONS

Name: STYLPRO™ Melody Mirror

Model: MI07A

Device Size: 330mm x 202mm DIAMETER 202mm

Materials: Glass, ABS

Nominal Voltage: 3.7v

Rated capacity of the battery: 2000mAh

Energy Capacity of the battery: 7.4Wh

Charge Voltage: 4.2V

Input power supply: USB socket, 5 V, 1A **3.7 V** , 2000 mAh, 7.4 Wh

Charging Time: 3.5 hours


Bluetooth Version: 5.0

Maximum Transmitted Power: 4 dBm

Frequency Bands: 2402 MHz ~ 2480 MHz

PARTS IDENTIFICATION:

1. Mirror 2. LED Ring Light 3. On/Off/Dimmer Button 4. Tray Base 5. Microphone 6. USB Charge Point 7. Indicator Light 8. Speaker 9. Bluetooth® Power Button.

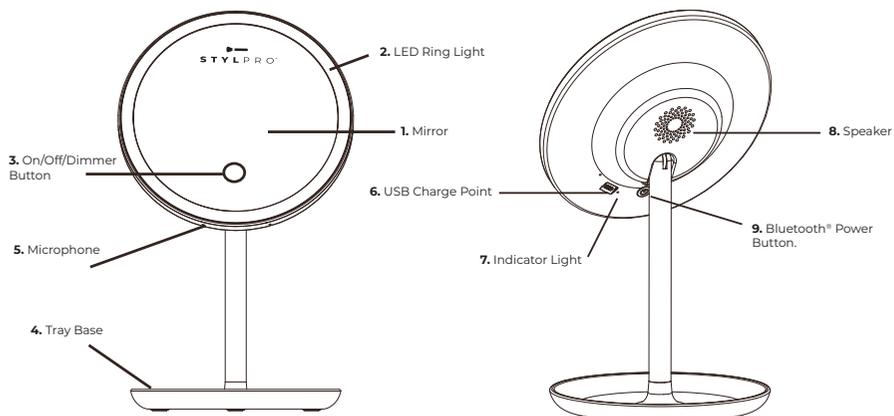

SAFETY GUIDELINES:

1. The STYLPRO™ Melody Mirror is made of glass. Please handle with care.
2. For adult use only. Not intended for use by children. This is not a toy.
3. Do not expose the STYLPRO™ Melody Mirror to direct sunlight while unattended. Reflected sunlight may cause fire.
4. To clean the mirror surface, wipe gently with a microfibre cloth and a branded mirror or glass cleaner. Do NOT use an aerosol mirror cleaner product.
5. Avoid storing the STYLPRO™ Melody Mirror in hot, humid, or damp areas.
6. If the STYLPRO™ Melody Mirror malfunctions or is damaged in any way, stop using it immediately. Contact STYLPRO™ CUSTOMER SERVICE (See section LIMITED TWO-YEAR WARRANTY for contact details).
7. Use LED lights with care. Extended use and prolonged exposure of LED lights into the eyes may cause damage. LEDs are not replaceable.
8. Keep away from liquids, if the STYLPRO™ Melody Mirror becomes wet, do not use.

SETTING UP YOUR MIRROR

Insert the mirror foot into the base, then twist clockwise to lock in place.

Charging

1. Plug the USB charging cable (provided) into the USB port, plug the other end into a USB friendly power source.

2. The light will turn red whilst charging and green when fully charged.

3. When fully charged, the Melody Mirror will play music with the light on for approx. 2.5 hrs before it needs to be recharged. When the mirror needs to be recharged it will verbally inform you. The Lights will continue to work for a short period after the speaker stops playing.

4. The Mirror can be used during charging.

Using the light

1. To turn the light on press the on/off/dimmer button at the front of the mirror. If you want to change the light settings, press the on/off/dimmer button again.

2. To dim the light press and hold the on/off/dimmer button.

3. To turn the light off press the on/off/dimmer button, keep pressing through all 3 light settings until the light goes off.

Connecting to your device via Bluetooth

1. Hold down the Bluetooth® Power Button at the back of the mirror to turn on Bluetooth®.

2. The button on the front will flash blue when it is ready to connect to your device.

3. Select 'Melody Mirror' from the list of available Bluetooth® pairings on your device.

4. To pair a new device, press the rear power button again.

Playing music through the Bluetooth speaker

1. Connect your device via Bluetooth®.

2. Play music from your favourite app or website.


3. The built in microphone allows you to speak hands free through Bluetooth® connected calls.

Turning off your melody mirror

1. To turn off the speaker, press the Bluetooth® Power Button on the back of the mirror.

2. To turn off the light, keep pressing the on/off/dimmer button on the front of the mirror until the lights have turned off completely.

3. Turns off automatically after 15 mins of inactivity.

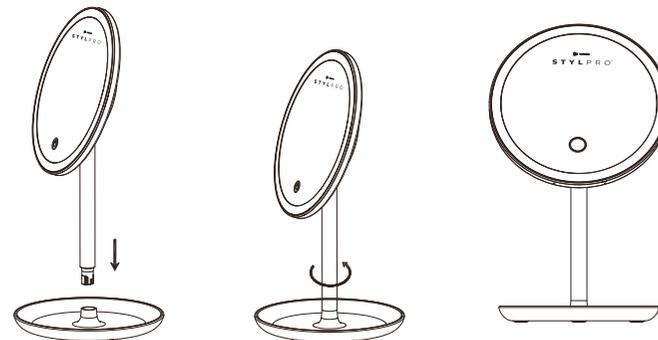

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE TAKEN, INCLUDING THE FOLLOWING: READ ALL INSTRUCTIONS BEFORE USING APPLIANCE. SAVE THESE INSTRUCTIONS. KEEP AWAY FROM WATER. THIS PRODUCT IS NOT A TOY. DO NOT STARE DIRECTLY INTO THE LIGHTS. USE INDOORS ONLY. FOR DOMESTIC HOUSEHOLD USE ONLY. DO NOT ATTEMPT TO OPEN THE BACK OF THE MIRROR. IF REQUIRED, CONSULT A PROFESSIONAL. KEEP MIRROR COOL AND AWAY FROM SOURCES OF DIRECT HEAT AND SUNLIGHT. KEEP AWAY FROM CHILDREN.
DANGER: TO REDUCE THE RISK OF ELECTRIC SHOCK: ALWAYS TURN OFF BEFORE CLEANING OR STORING.

WARNING:

TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

1. READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.
2. TO PROTECT AGAINST ELECTRICAL HAZARDS, DO NOT USE WHILE BATHING OR IN THE SHOWER.
3. CLOSE SUPERVISION IS NECESSARY WHEN ANY APPLIANCE IS USED BY OR NEAR CHILDREN OR PERSONS MADE WEAK OR DISABLED BY ILLNESS OR INJURY.
4. DO NOT OPERATE THIS APPLIANCE IF THE APPLIANCE MALFUNCTIONS OR HAS BEEN DROPPED OR DAMAGED IN ANY MANNER. RETURN APPLIANCE TO NEAREST SERVICE FACILITY FOR EXAMINATION, ELECTRICAL OR MECHANICAL ADJUSTMENT, OR REPAIR. NO REPAIRS SHOULD BE ATTEMPTED BY THE CONSUMER.
5. USE APPLIANCE ONLY FOR INTENDED USE AS DESCRIBED IN THIS INSTRUCTION BOOK. THE USE OF ATTACHMENTS NOT RECOMMENDED BY STYLPRO™ MAY CAUSE HAZARDS.
6. DO NOT USE OUTDOORS OR OPERATE WHERE AEROSOL (SPRAY) PRODUCTS ARE BEING USED, OR WHERE OXYGEN IS BEING ADMINISTERED.
7. BE SURE STYLPRO™ MELODY MIRROR IS NOT IN A POSITION WHERE IT CAN REFLECT SUNLIGHT; REFLECTED SUNLIGHT CAN CAUSE FIRE.
8. DO NOT LAY ON A SOFT SURFACE SUCH AS A BED AS MIRROR MAY OVERHEAT.
9. ENSURE DEVICE IS 'OFF' BEFORE STORAGE.
10. DO NOT USE APPLIANCE IN THE BATHROOM OR NEAR WATER.
11. DO NOT PLACE OR STORE APPLIANCE WHERE IT CAN FALL OR BE PULLED INTO A TUB OR SINK.
12. DO NOT PLACE IN OR DROP INTO WATER OR OTHER LIQUIDS.
13. IF THE APPLIANCE FALLS INTO WATER, DO NOT REACH INTO THE WATER.
14. CHOKING HAZARD DUE TO SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

STORAGE

ENSURE DEVICE IS 'OFF' BEFORE STORAGE. PRESS THE ON/OFF/DIMMER BUTTON ONCE AND THE LIGHT WILL FADE OFF. ENSURE THE MIRROR IS UNPLUGGED FROM ANY POWER SUPPLY. BE SURE DIRECT SUNLIGHT DOES NOT STRIKE MIRROR WHEN LEFT UNATTENDED. ALLOW TO COOL TO ROOM TEMPERATURE BEFORE STORING. PLACE IN COOL, DRY AREA OUT OF REACH OF CHILDREN, WHERE MIRROR WILL NOT BE DAMAGED.

MAINTENANCE

YOUR STYLPRO™ MELODY MIRROR IS VIRTUALLY MAINTENANCE FREE. NO LUBRICATION IS NEEDED. IF CLEANING BECOMES NECESSARY, TURN THE APPLIANCE OFF, ALLOW TO COOL AND WIPE EXTERIOR WITH A DAMP CLOTH. CLEAN MIRROR SURFACES WITH A GLASS CLEANER. DO NOT LIGHT UNTIL YOU ARE CERTAIN MIRROR IS COMPLETELY DRY. IF ANY ABNORMAL CONDITION OCCURS, TURN OFF THE LIGHTED MIRROR, & CONTACT STYLPRO™ CUSTOMER SERVICES ON +44 (0) 20 3225 5559.

LIMITED TWO-YEAR WARRANTY

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE EUROPEAN CONSUMER LAW. EU DIRECTIVE 1999/44/EC, THIS

DIRECTIVE STATES A TWO-YEAR GUARANTEE APPLIES FOR THE SALE OF ALL CONSUMER GOODS EVERYWHERE IN THE EU. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE. STYLPRO™ WILL REPAIR OR REPLACE (AT OUR OPTION) YOUR APPLIANCE FREE OF CHARGE FOR TWENTY-FOUR MONTHS FROM THE DATE OF PURCHASE, IF THE APPLIANCE IS DEFECTIVE IN WORKMANSHIP OR MATERIALS. THIS WARRANTY IS AN ADDITIONAL BENEFIT AND DOES NOT AFFECT YOUR LEGAL RIGHTS. TO OBTAIN SERVICE UNDER THIS WARRANTY, PLEASE READ THE WARRANTY LEAFLET INCLUDED OR CONTACT STYLPRO™ CUSTOMER SERVICE AT TEAMTOM@STYLIDEAS.COM +44 (0) 20 3225 5559. TO MAKE A WARRANTY CLAIM YOU MUST RETAIN YOUR PROOF OF PURCHASE.

IMPORTANT: THIS WARRANTY DOES NOT COVER DAMAGE RESULTING FROM ACCIDENTS, MISUSE, ALTERATIONS, ABUSE, LACK OF REASONABLE CARE OR USE OTHER THAN DESCRIBED IN THESE INSTRUCTIONS, OR PERFORMANCE OF SERVICE OR REPAIRS BY AN UNAUTHORISED SERVICE CENTRE. THIS WARRANTY IS VALID ONLY ON MERCHANDISE SOLD BY AUTHORISED RETAILERS. NOTE, THE ITEM MUST BE THOROUGHLY CLEANED PRIOR TO RETURN.

CORRECT DISPOSAL OF THIS PRODUCT: WHEN THE PRODUCT HAS REACHED THE END OF ITS USAGE, PLEASE DO NOT DISPOSE WITH REGULAR HOUSEHOLD WASTE. RECYCLING IS THE SAFEST AND MOST RESPONSIBLE WAY TO DISPOSE OF ELECTRICAL ITEMS THAT COME TO THE END OF THEIR LIFECYCLE. PLEASE DISPOSE OF IT ACCORDING TO YOUR LOCAL REGULATIONS. THE WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE) DIRECTIVE IN EUROPEAN COUNTRIES STIPULATES CORRECT RECYCLING PRACTICES. DO NOT DISPOSE IN REGULAR HOUSEHOLD WASTE.

UKCA & CE MARKING: UK/EU – DECLARATION OF CONFORMITY: STYLIDEAS LTD DECLARES THAT STYLPRO™ MEOLDY MIRROR COMPLIES WITH THE ESSENTIAL REQUIREMENTS AND OTHER RELEVANT PROVISIONS. A COPY OF THE DECLARATION OF CONFORMITY IS AVAILABLE ON REQUEST. STYLIDEAS LTD, AMSHOLD HOUSE, GOLDINGS HILL, LOUGHTON, ESSEX, IG10 2RW, UK. OBELIS S.A, BD. GÉNÉRAL WAHIS 53, B-1030 BRUSSELS, BELGIUM.

©2023 STYLIDEAS Ltd. All rights reserved. STYLIDEAS owns trademarks, registered trademarks, patents, patents pending, design registrations and protection of the copyright of its products. www.stylideas.com/ip. Distributed by STYLIDEAS Ltd, UK: Amshold House, IG10 2RW, UK. +44(0)20 3225 5559 teamtom@stylideas.com.
EU: OBELIS S.A, Bd. Général Wahis 53, B-1030 Brussels, Belgium

